 


LifeFitness


UPRIGHT BIKE 95CE

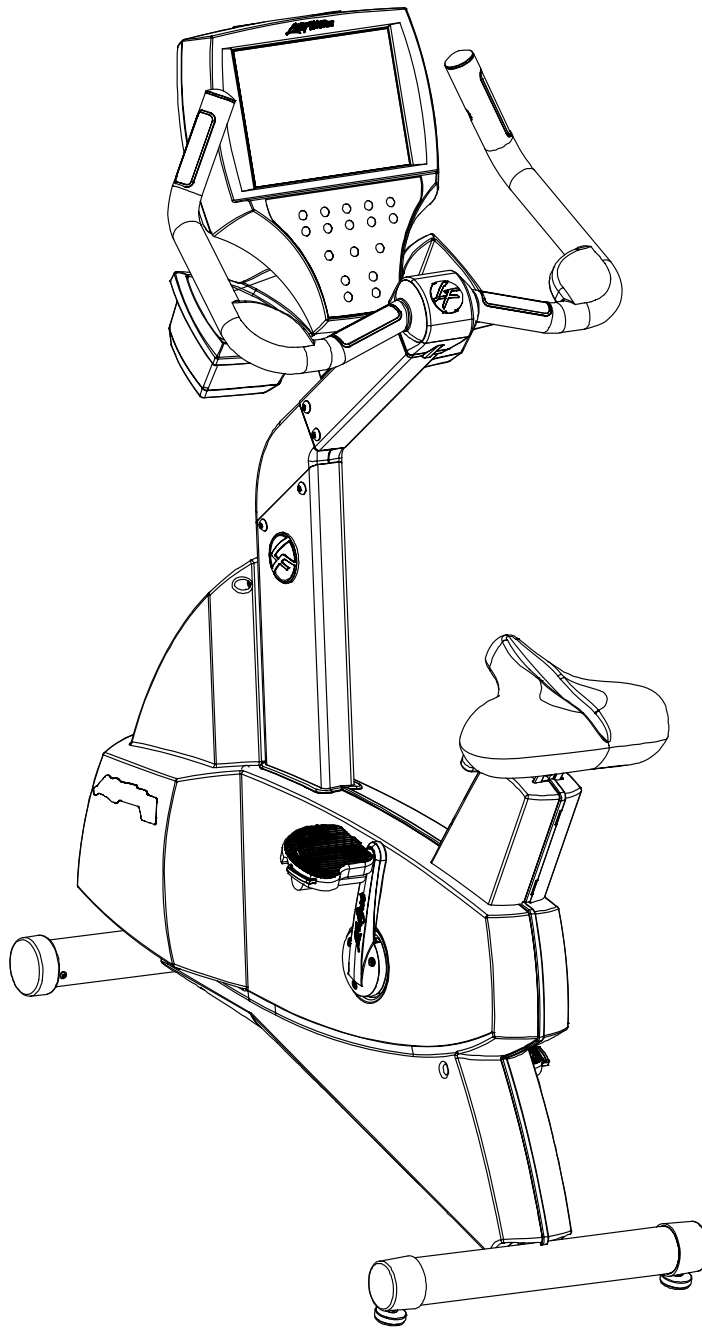

Customer Support Services
PARTS MANUAL rev 18 Aug 2008


OPERATOR MANUAL	M051-00K63-A088
SERVICE MANUAL	M051-00K63-B012
POWER-SUPPLY: 12V; 4.5A	118E-00001-0161
Without Line cord	
LINE-CORD: DOM. 10A 125V	0017-00003-0704
LINE-CORD: CON 10A 250V	0017-00003-0691
LINE-CORD: 10A; U.K	0017-00003-0889
LINE-CORD: AUSTRALIA	0017-00003-0918
HARDWARE Kit	GK63-00002-0056


	Page
CONSOLE ASSEMBLY	4
CONSOLE SCREWS AND ACCESSORY TRAY	5
ALTERNATOR AND PULLEY	6
CRANK SHAFT AND BEARINGS	7
INTERMEDIATE SHAFT AND BEARINGS	8
SEAT LATCH ASSEMBLY	9
SEAT POST ASSEMBLY	10
SEAT POST SHROUDS	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY	13
LEFT SIDE SHROUD & CRANKARM	14
RIGHT SIDE SHROUD & CRANKARM	15
PCB MOUNTING BRACKET	16
FRONT WHEEL ASSEMBLY	17
RESISTOR ASSEMBLY	18
HANDLEBAR ASSEMBLY	19
BELTS.....	20
CABLES.....	21

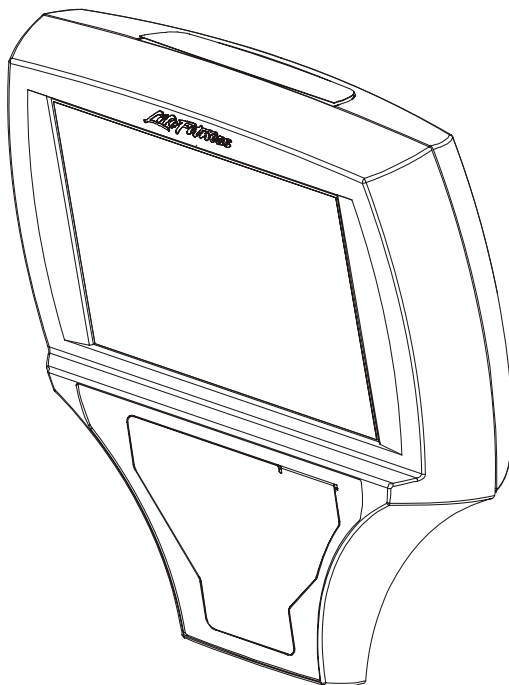 


CONSOLE ASSEMBLY	
Part Number	Description
GK63-00002-0063	KIT: SERVICE CONSOLE W/FM NTSC ENG
GK63-00002-0064	KIT: SERVICE CONSOLE W/FM NTSC SPN
GK63-00002-0065	KIT: SERVICE CONSOLE W/FM NTSC JAP
GK63-00002-0066	KIT: SERVICE CONSOLE W/FM NTSC FRN
GK63-00002-0067	KIT: SERVICE CONSOLE W/FM NTSC POR
GK63-00002-0068	KIT: SERVICE CONSOLE W/FM NTSC PAL ENG
GK63-00002-0069	KIT: SERVICE CONSOLE W/FM NTSC PAL GER
GK63-00002-0070	KIT: SERVICE CONSOLE W/FM NTSC PAL SPN
GK63-00002-0071	KIT: SERVICE CONSOLE W/FM NTSC PAL FRN
GK63-00002-0072	KIT: SERVICE CONSOLE W/FM NTSC PAL ITL
GK63-00002-0073	KIT: SERVICE CONSOLE W/FM NTSC PAL DUT
GK63-00002-0074	KIT: SERVICE CONSOLE W/FM NTSC PAL POR

OVERLAY BEZEL ASSEMBLY	
Part Number	Description
AK63-00247-0001	BZL/SW W/OVERLAY ASSY: MFG; ENG
AK63-00247-0003	BZL/SW W/OVERLAY ASSY: MFG; GER
AK63-00247-0004	BZL/SW W/OVERLAY ASSY: MFG; SPN
AK63-00247-0006	BZL/SW W/OVERLAY ASSY: MFG; JAP
AK63-00247-0007	BZL/SW W/OVERLAY ASSY: MFG; FRN
AK63-00247-0008	BZL/SW W/OVERLAY ASSY: MFG; ITL
AK63-00247-0009	BZL/SW W/OVERLAY ASSY: MFG; DUT
AK63-00247-0010	BZL/SW W/OVERLAY ASSY: MFG; POR

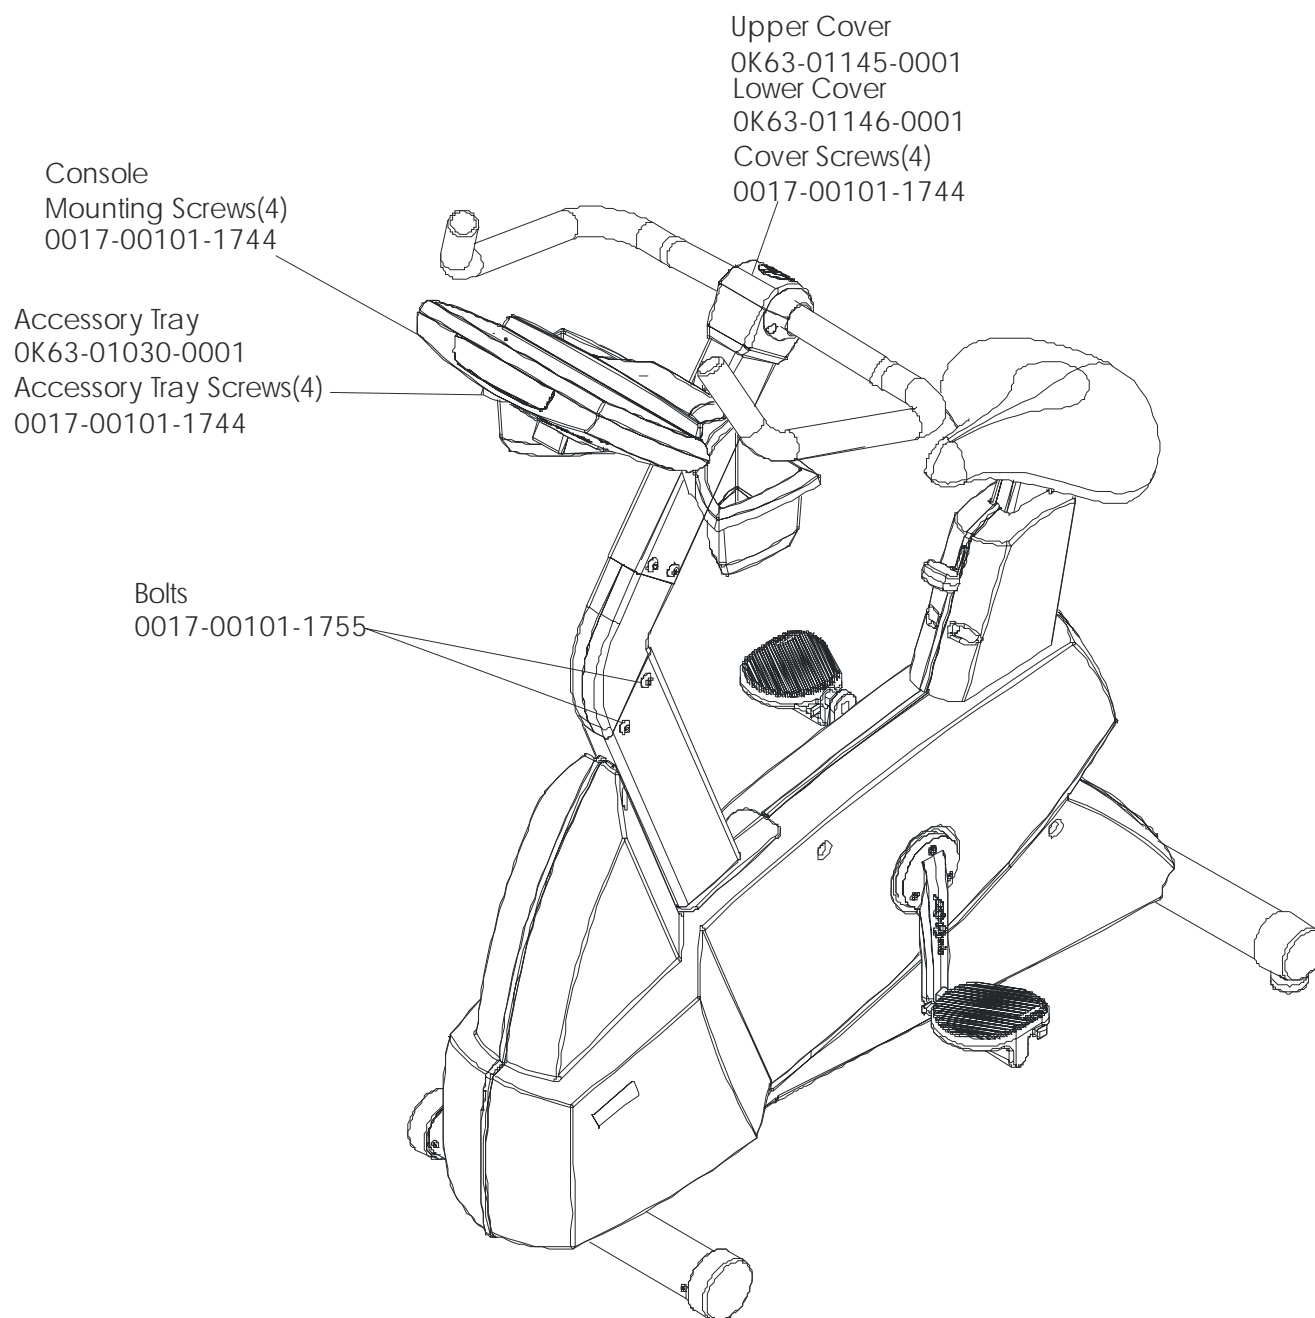 

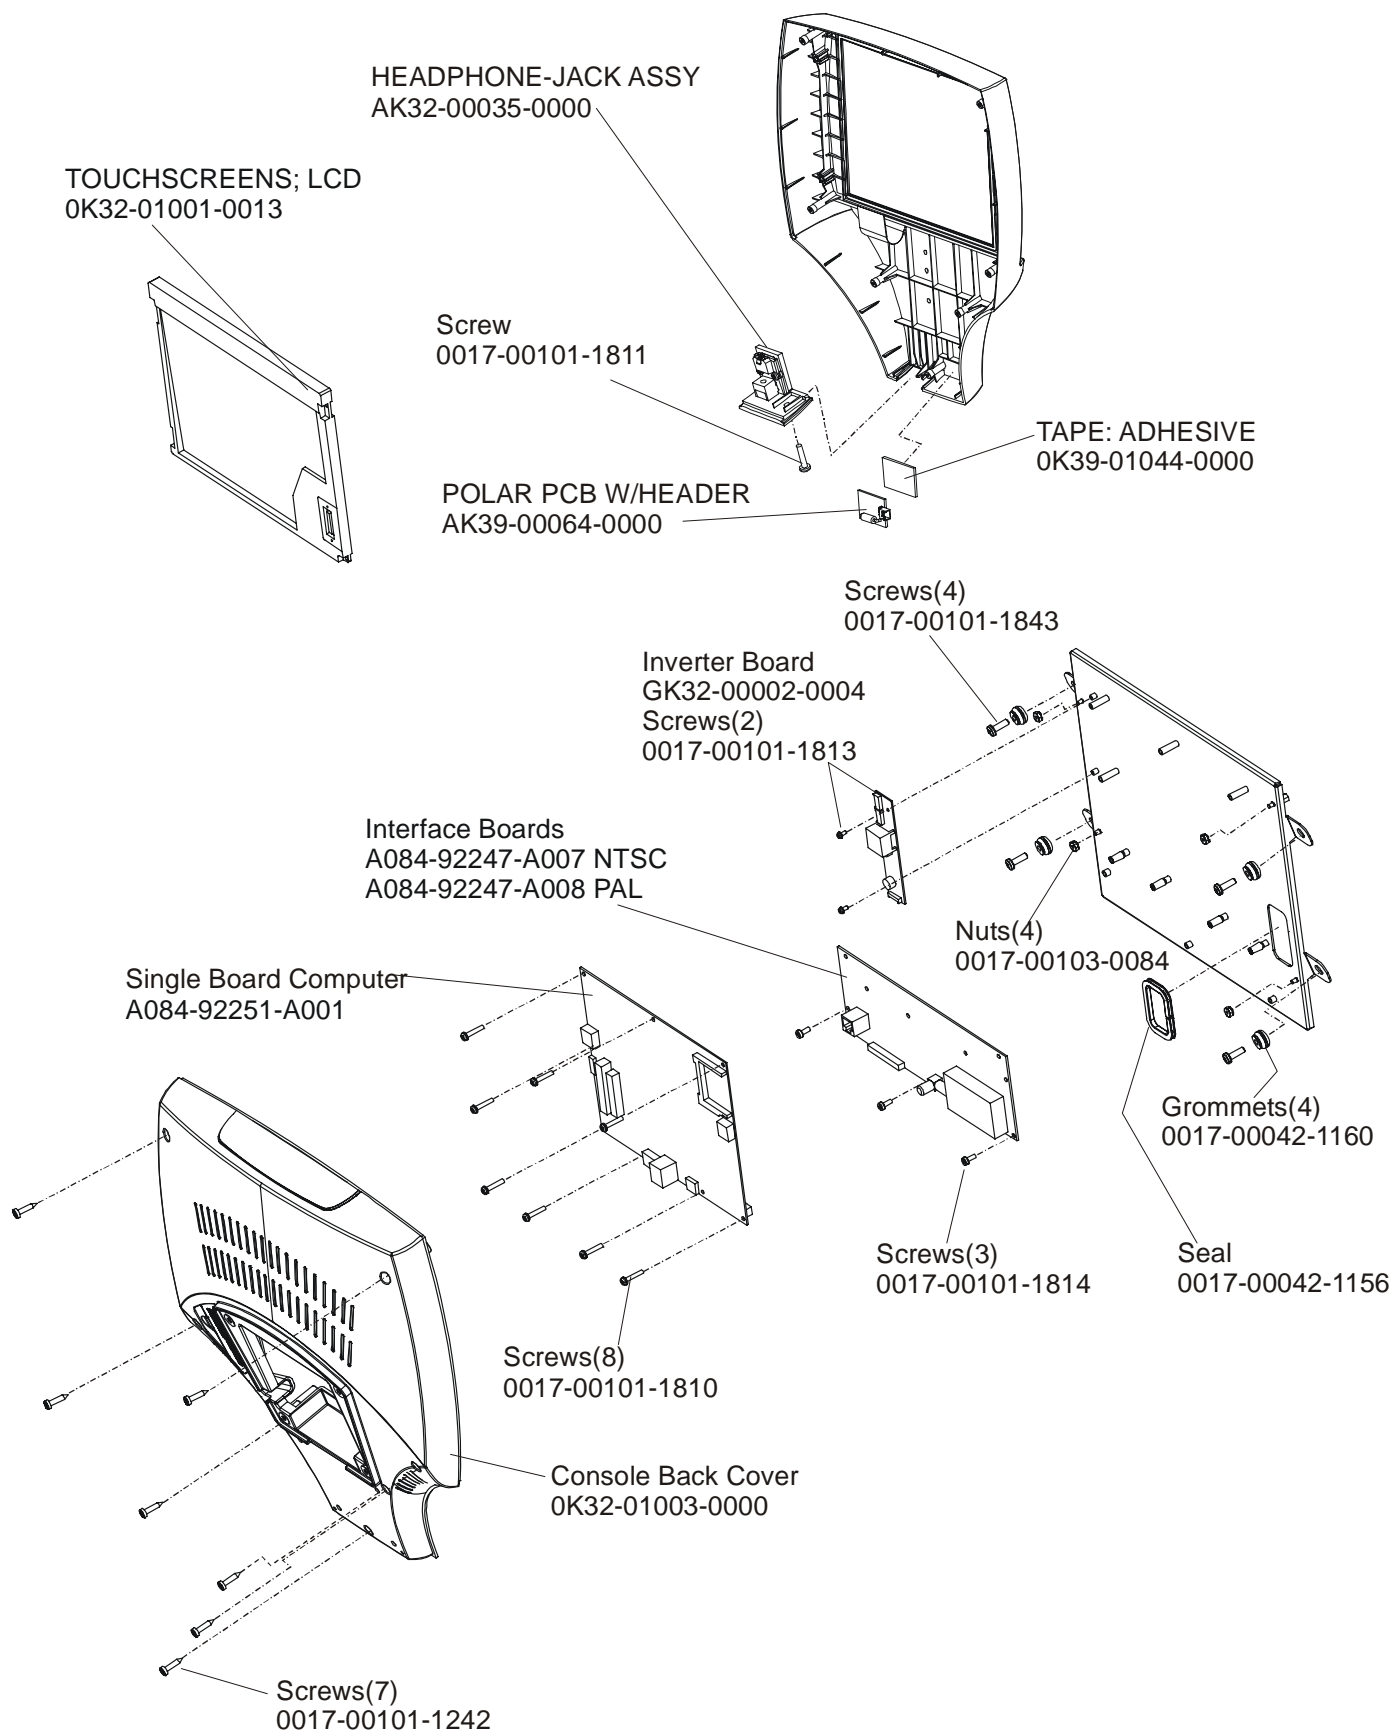 


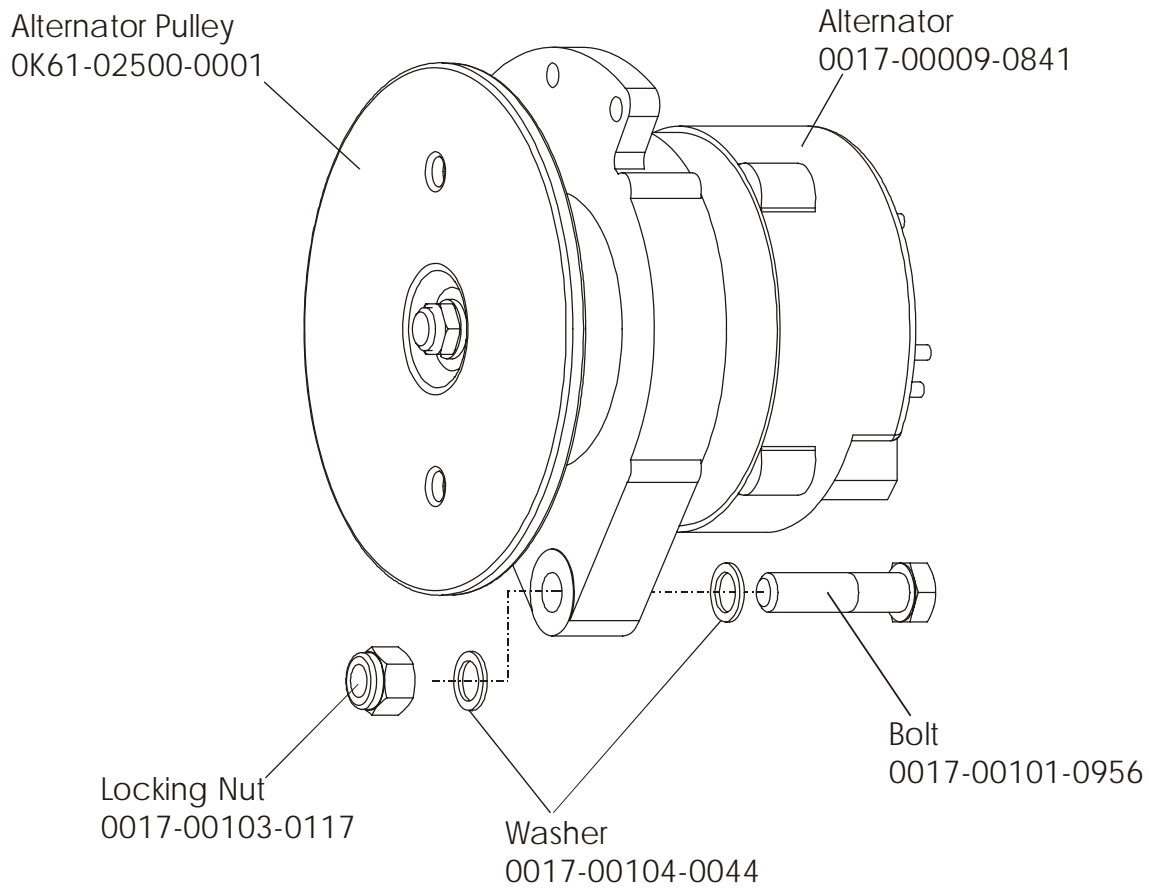 



Life Cycle 95CE


Crank Shaft and Bearings

     
 
95CE-0__-01
S/N LCE100000

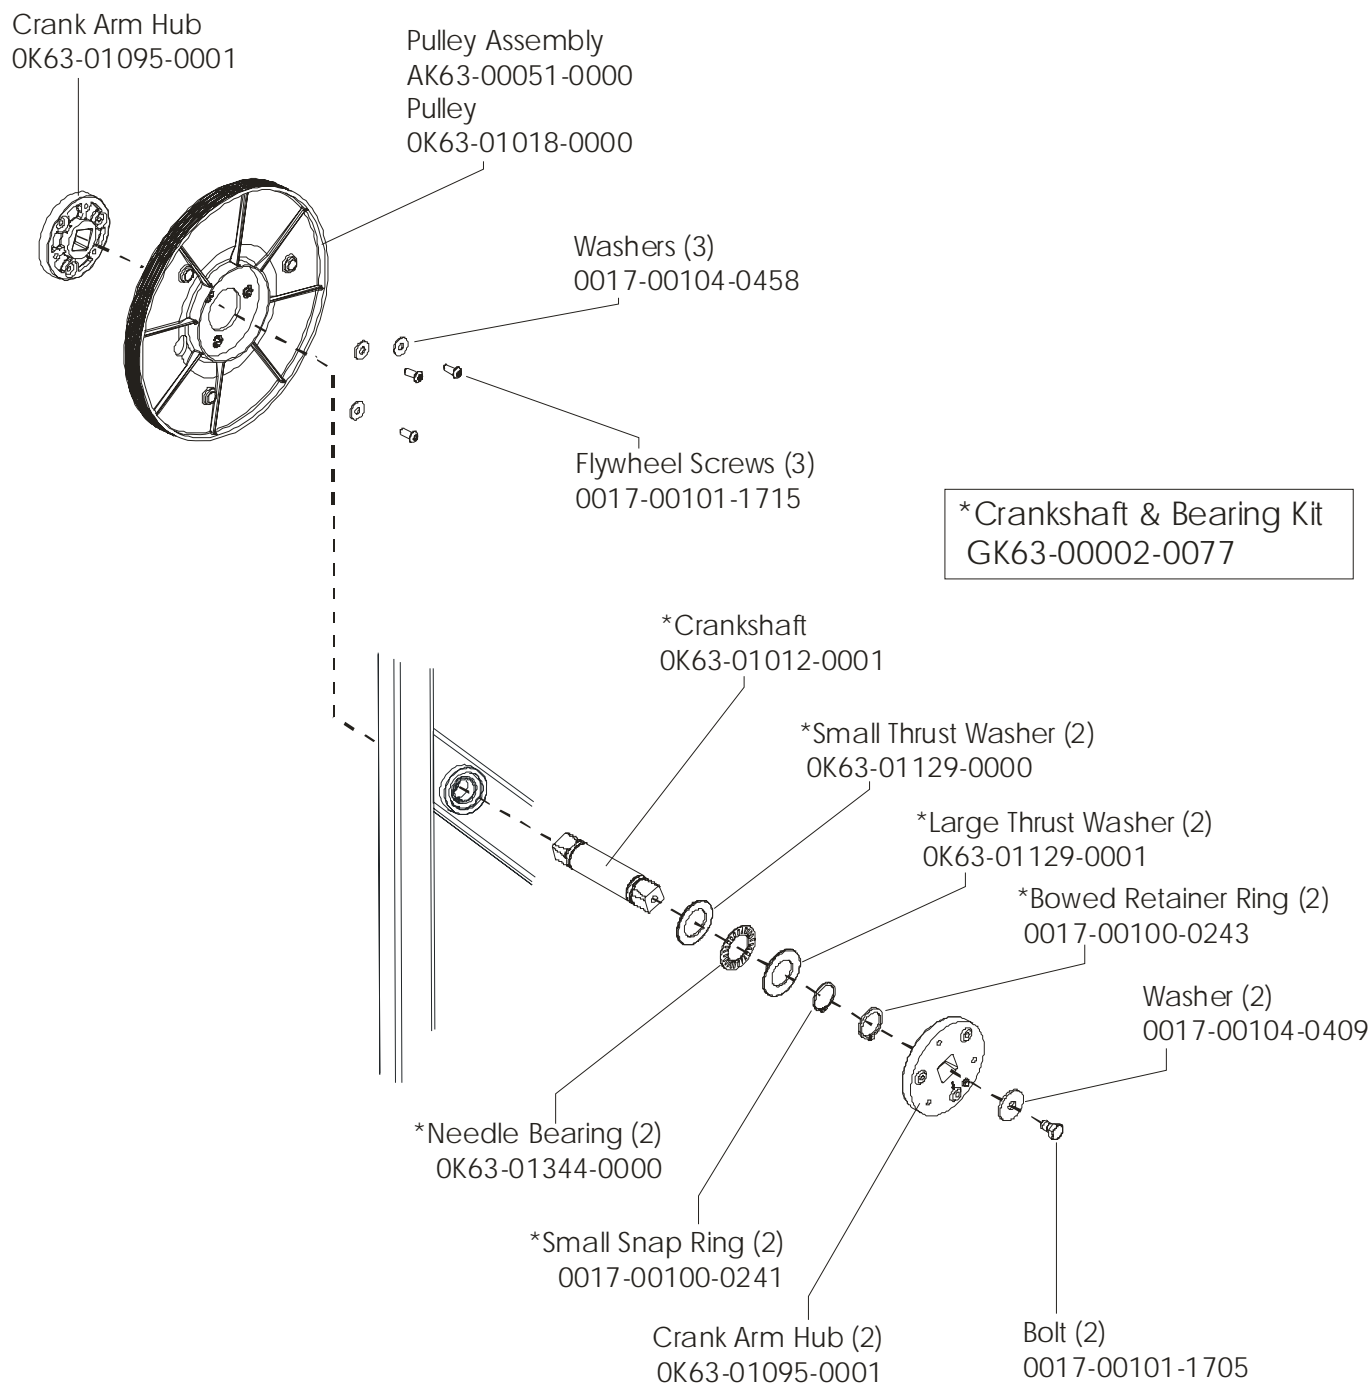 


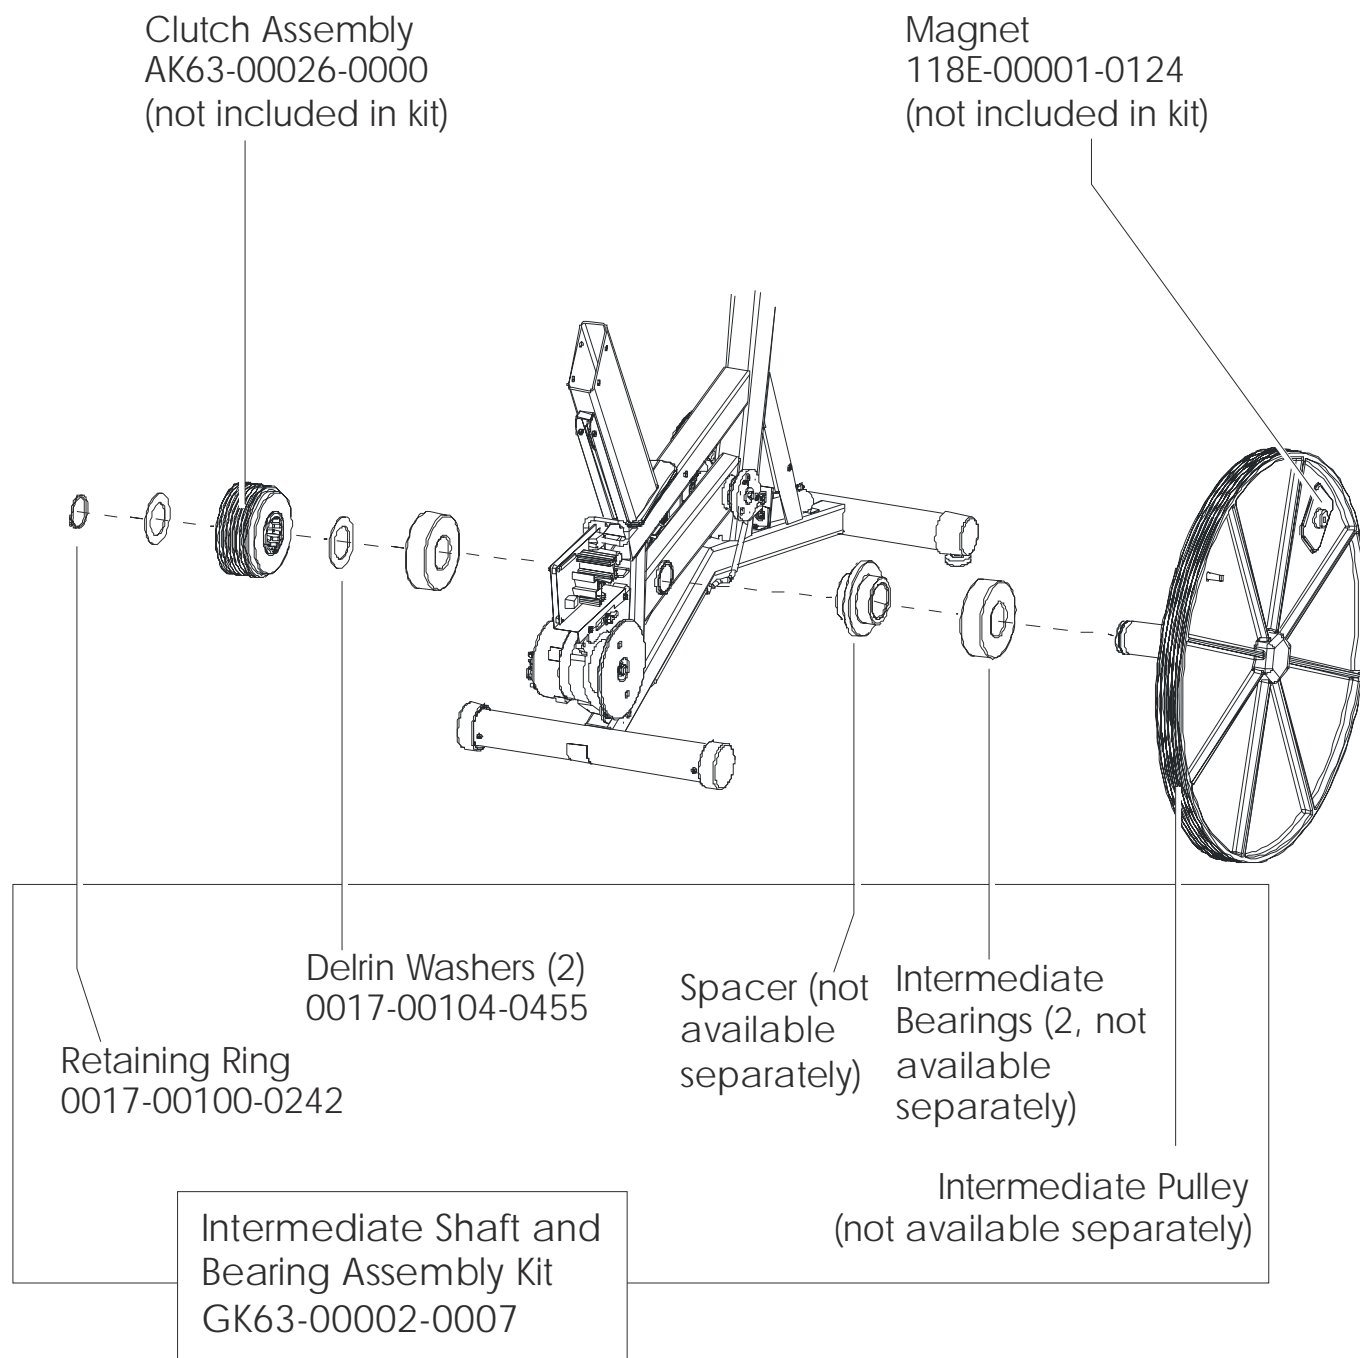 


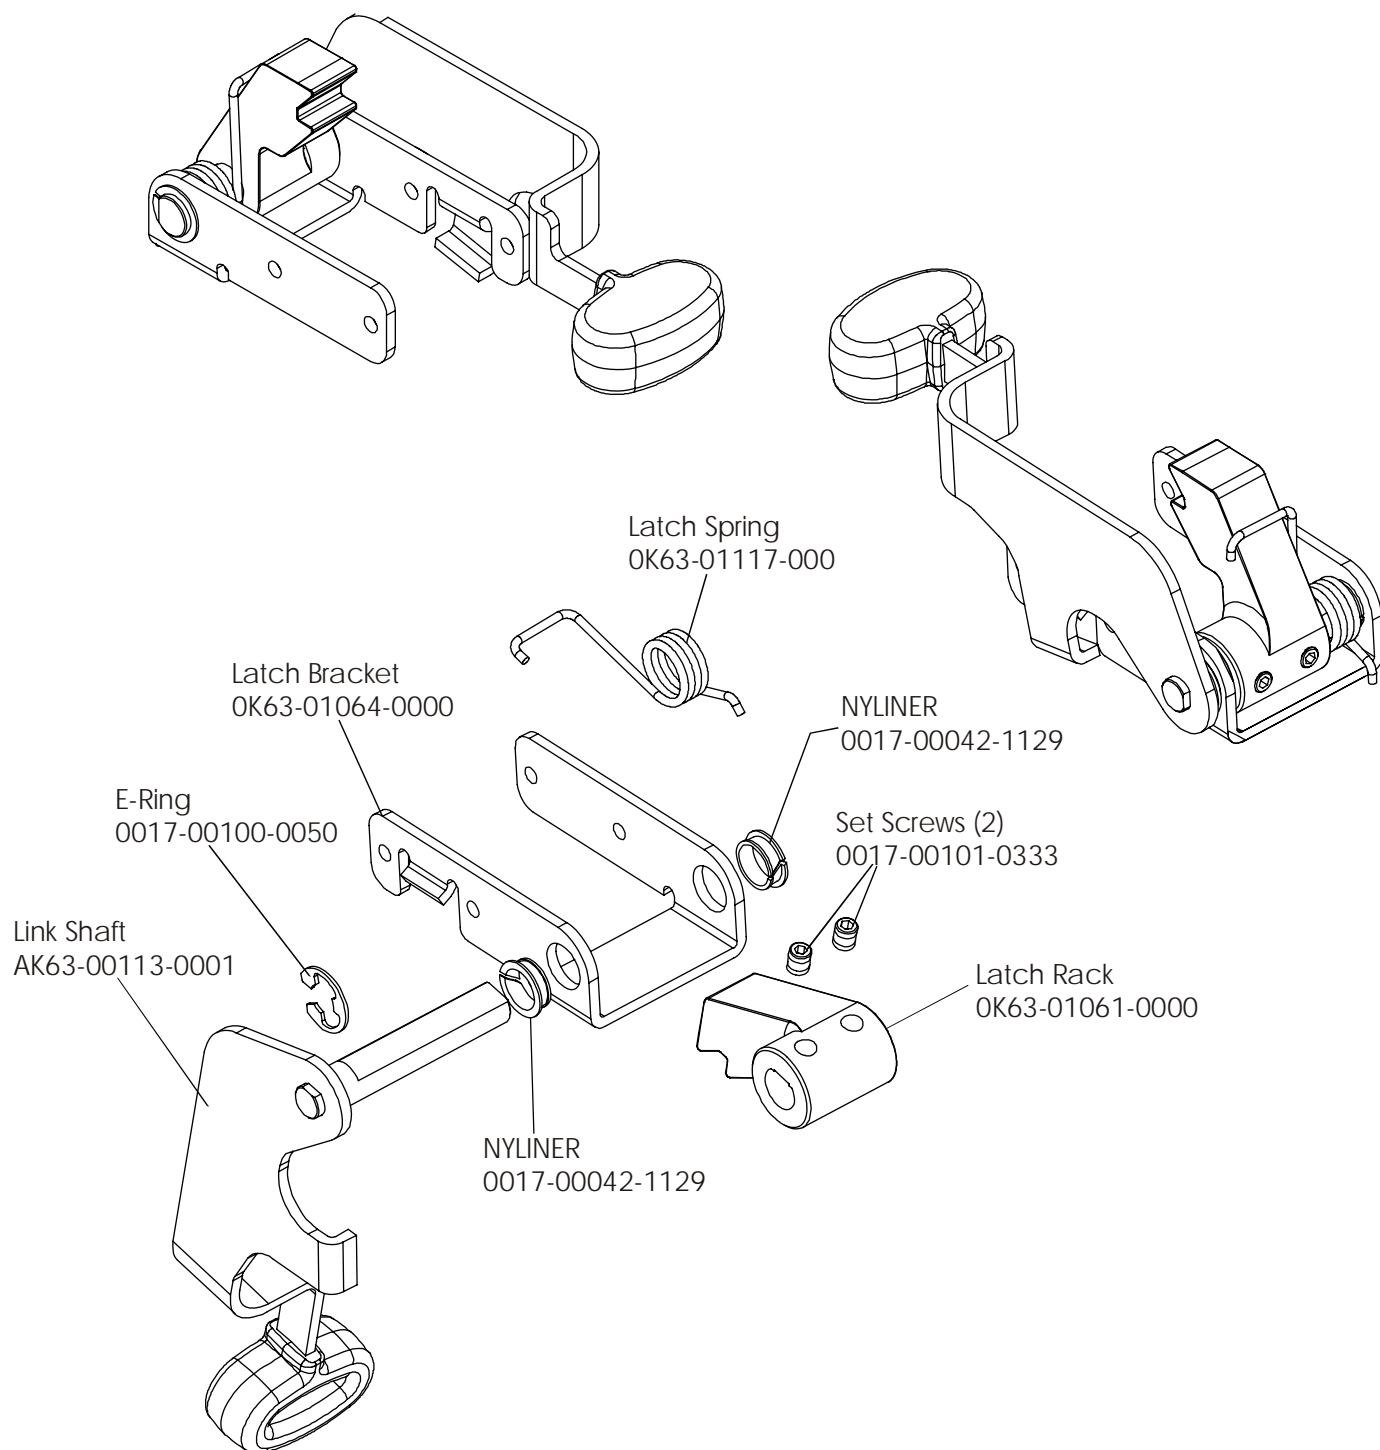 


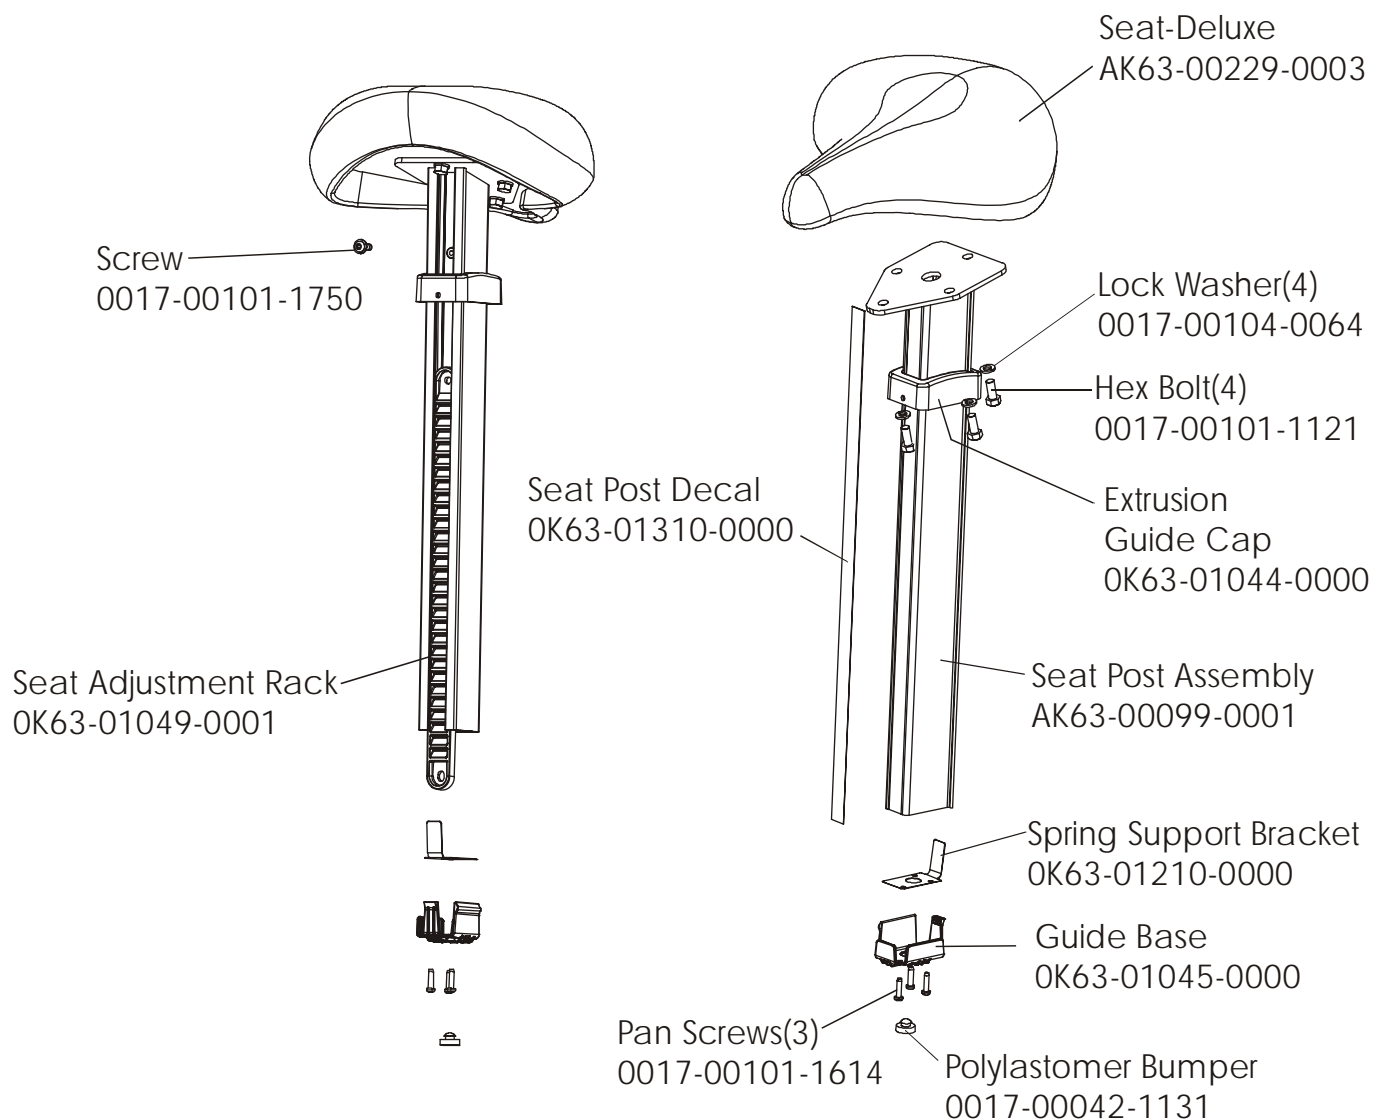 


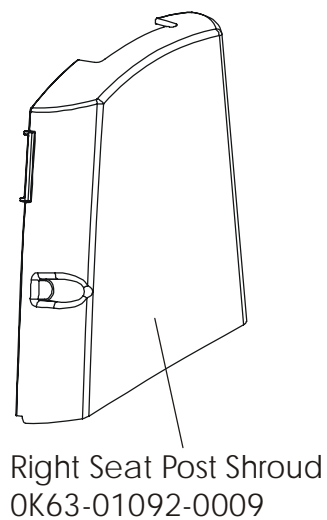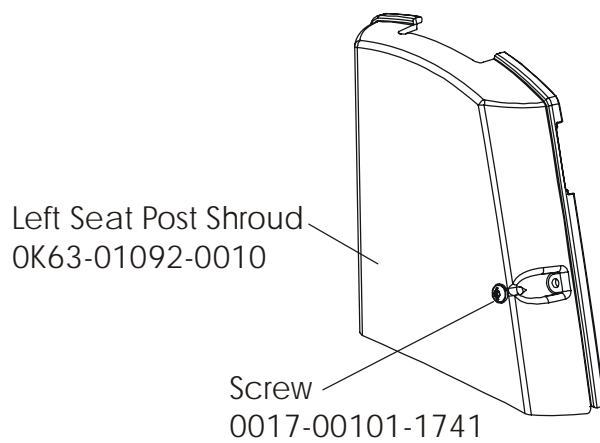

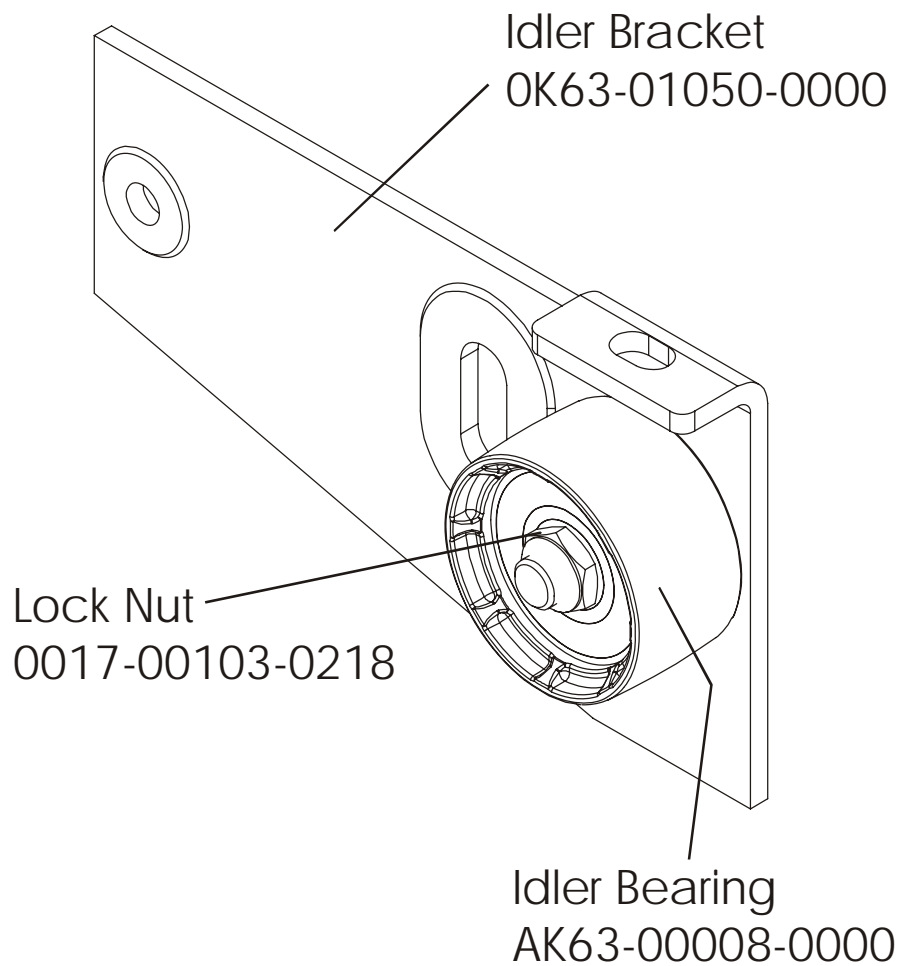

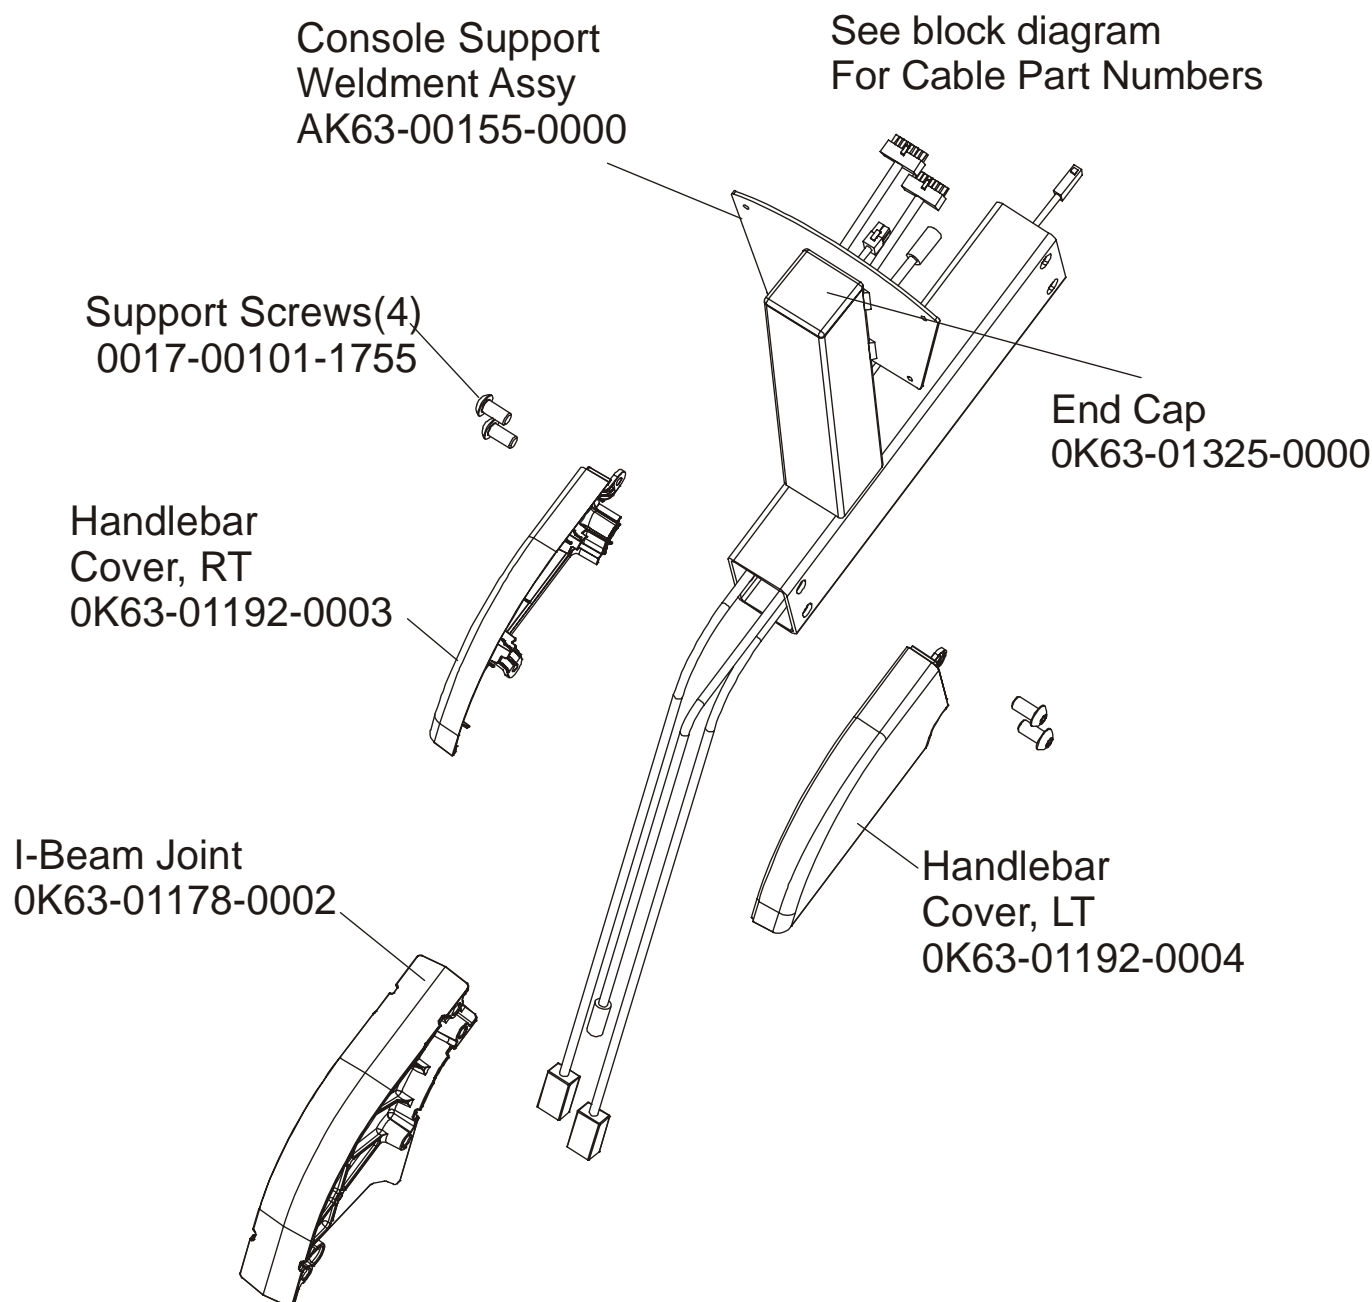

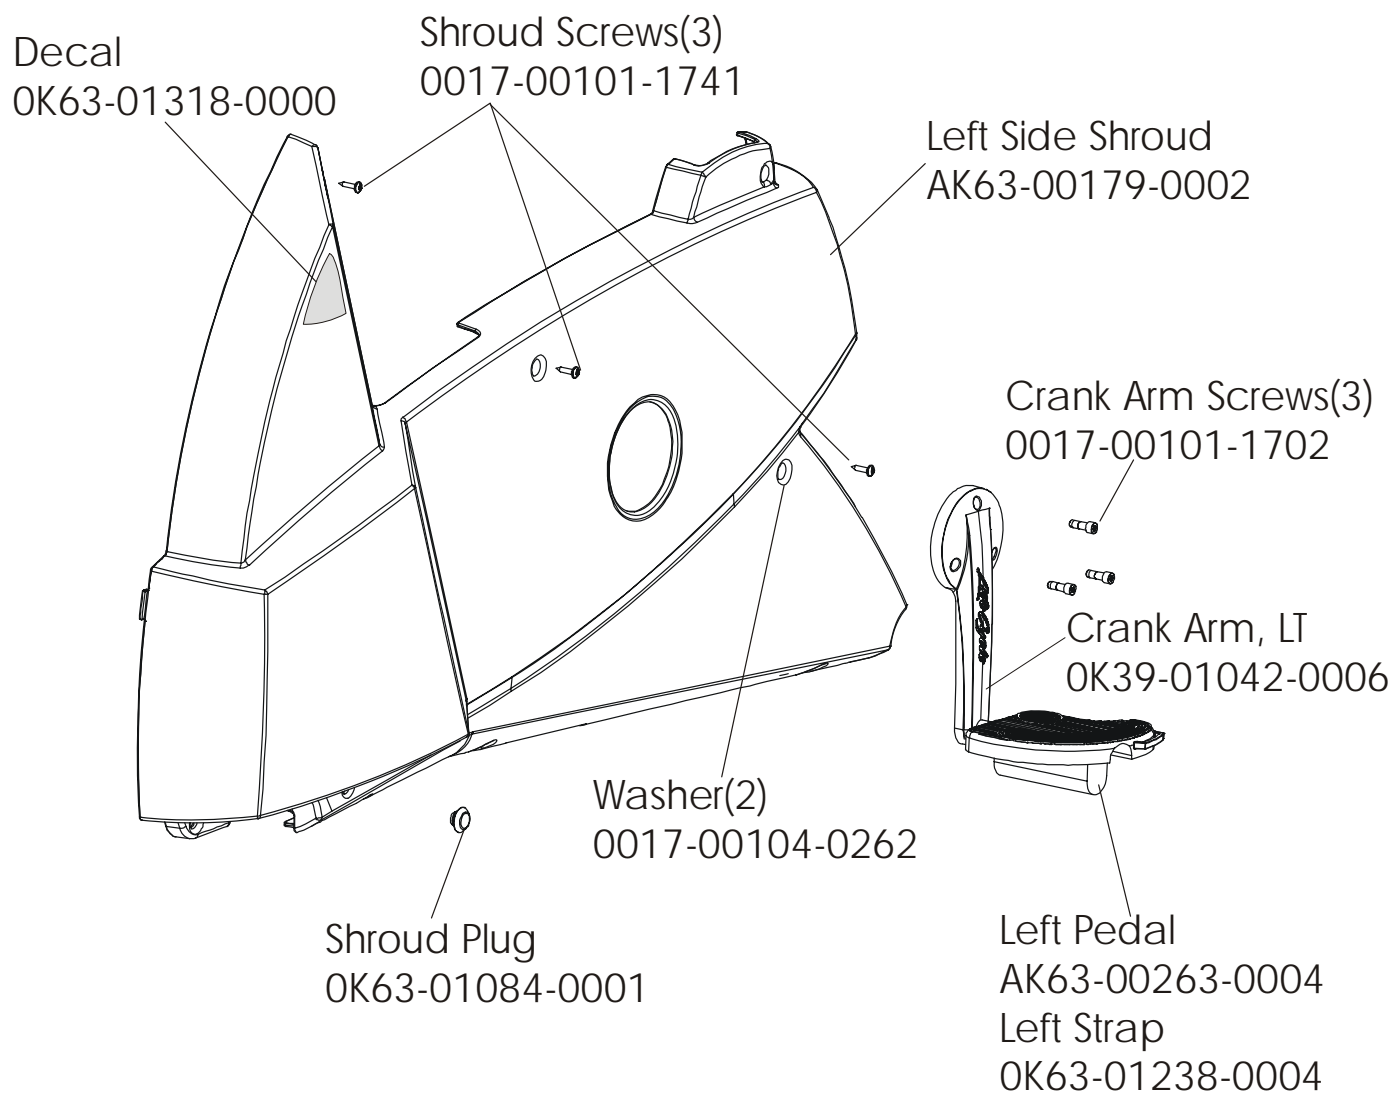

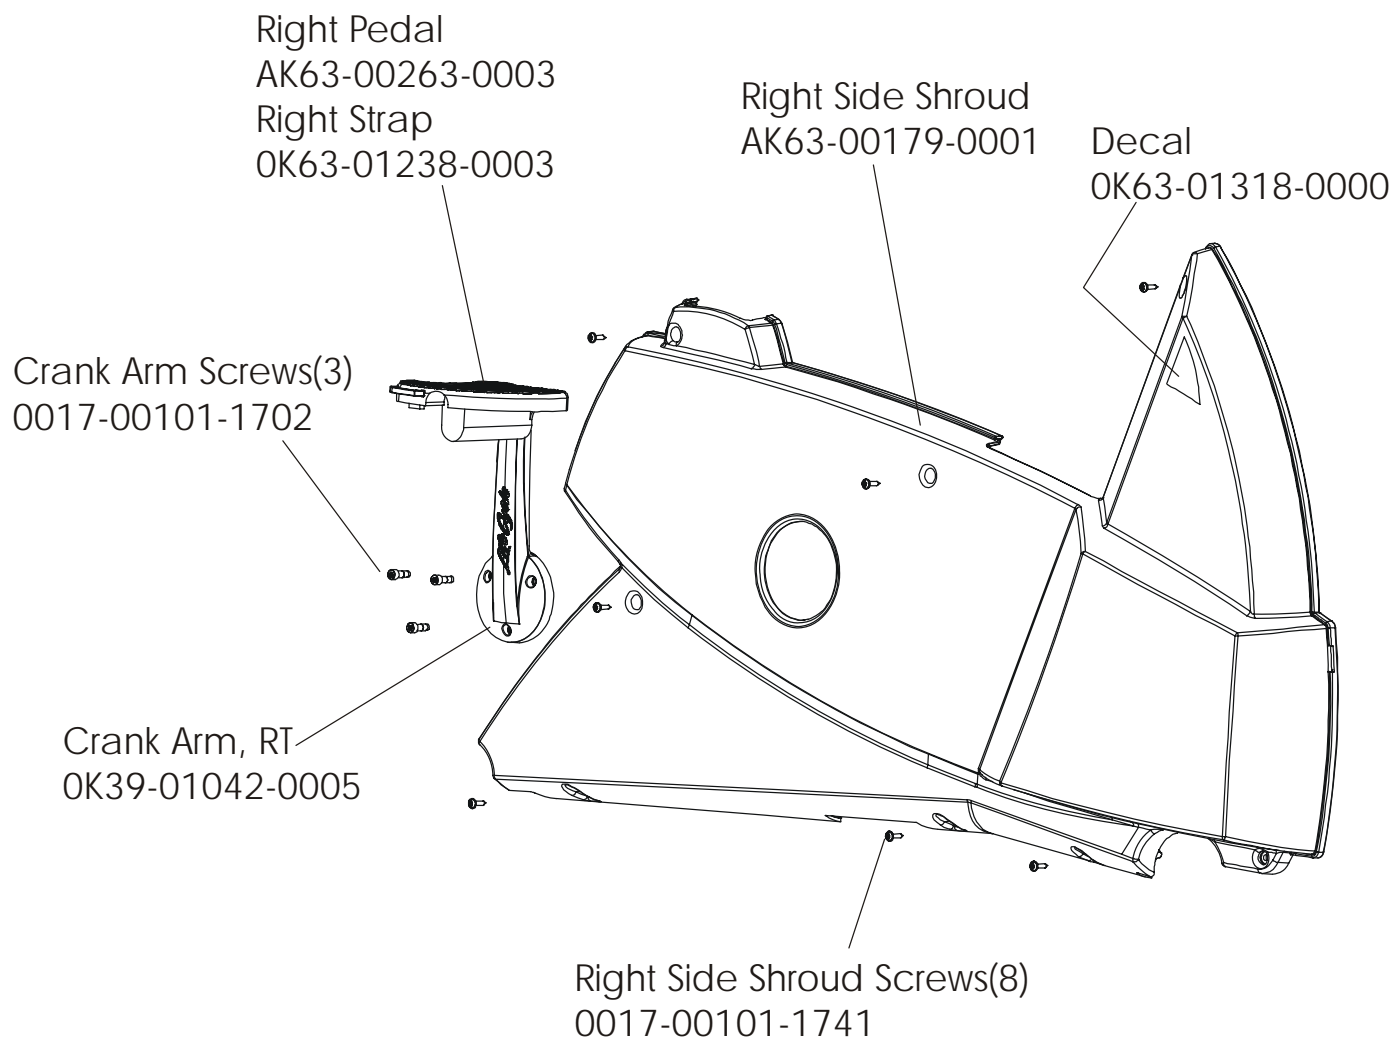



BRKT: PCB-MTG
0K63-01211-0001


PCB-ASSY: POWER-SUPPLY; LCD
B084-92280-A000


GROMMET: PLASTI
0017-00042-0821

    Screw
0017-00101-0823

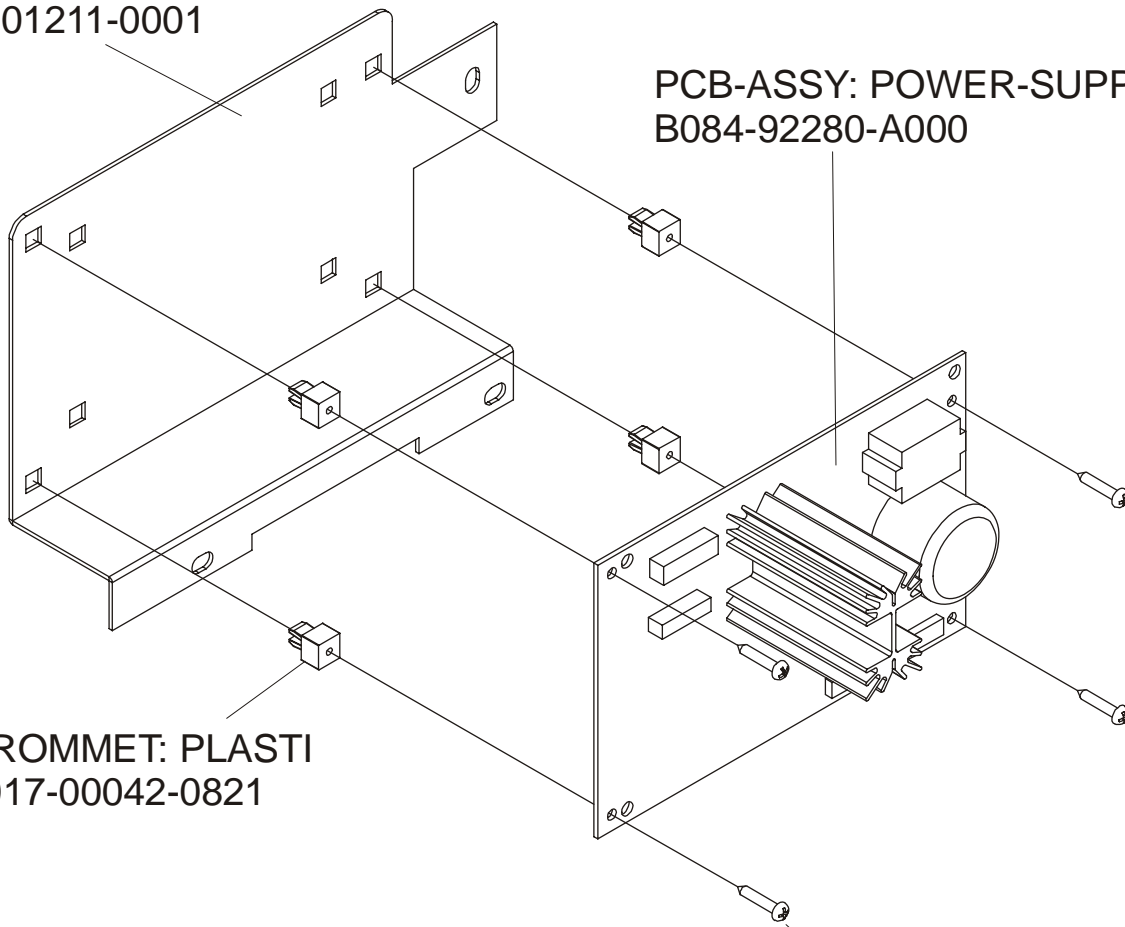


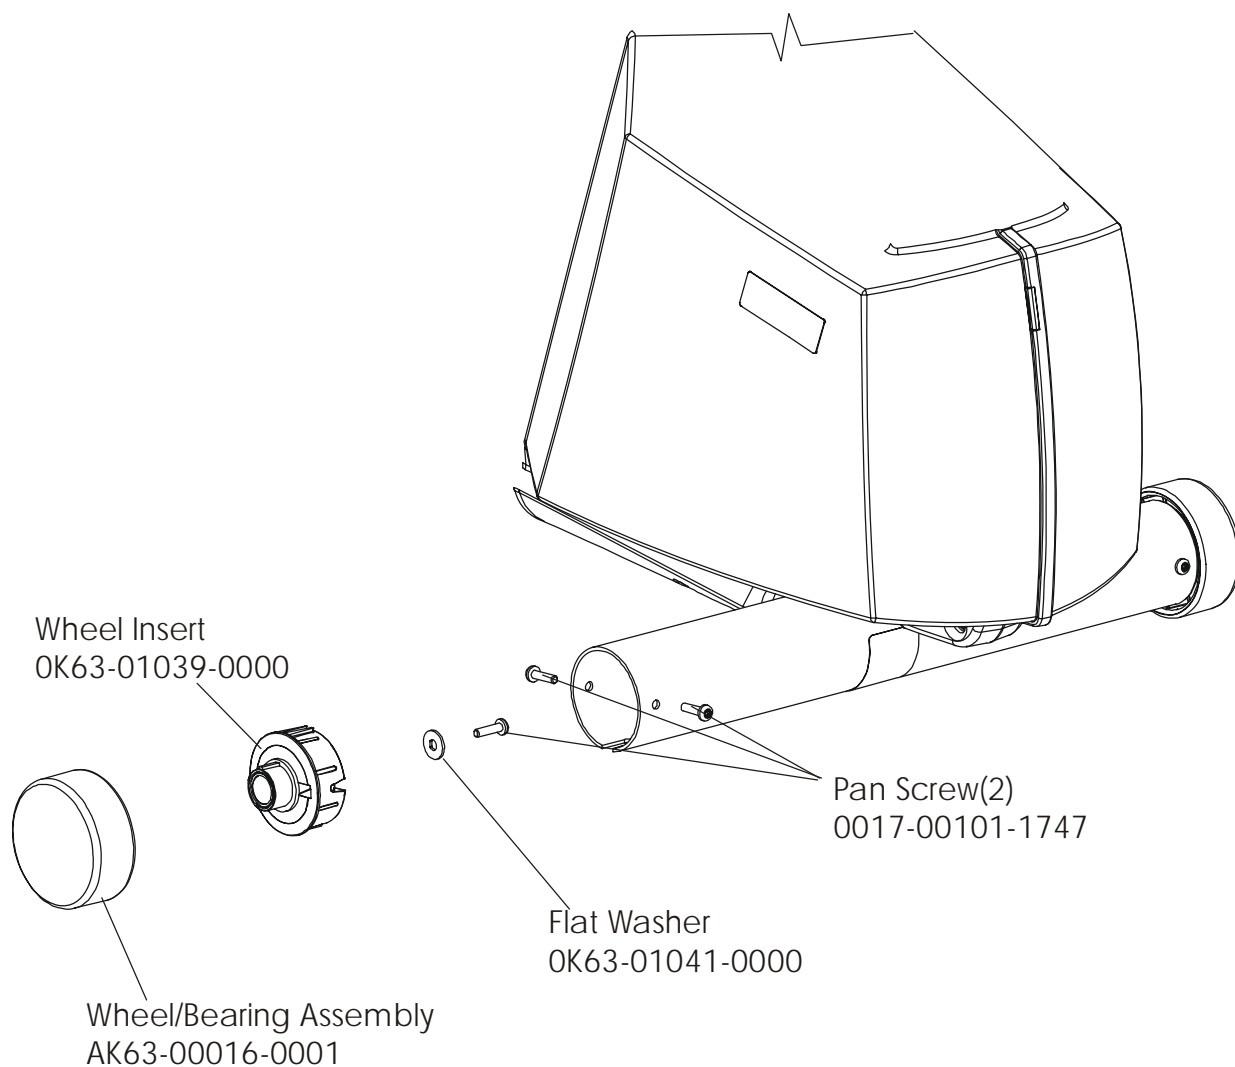

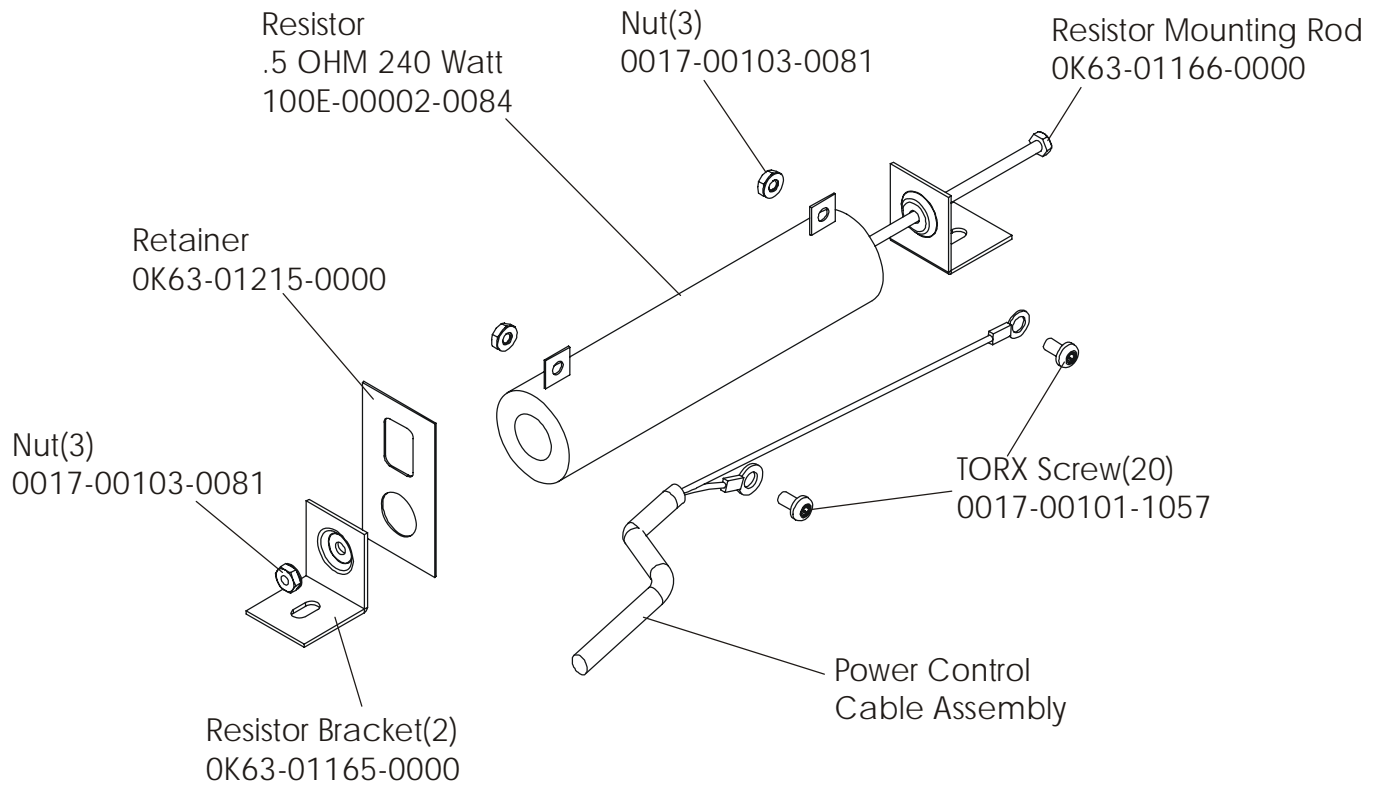

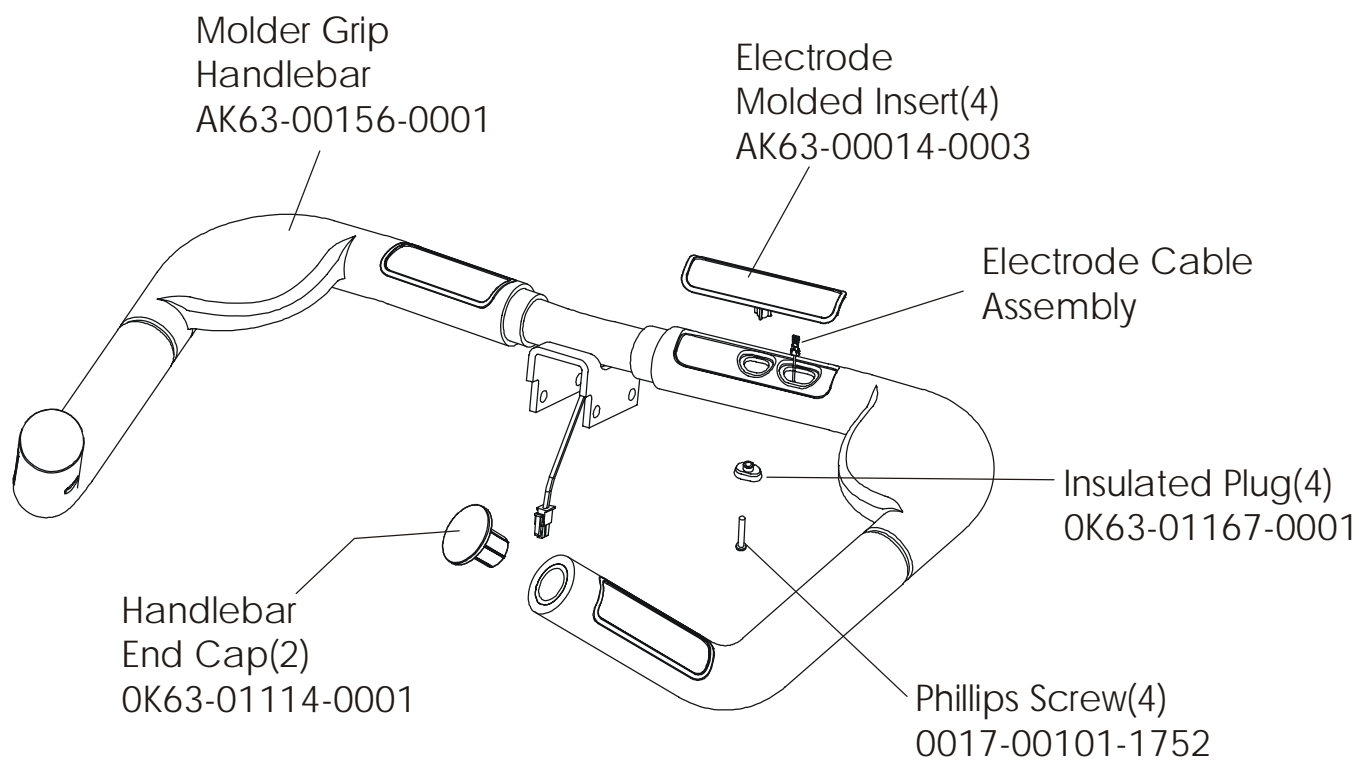

Alternator Belt
OK63-01065-0000

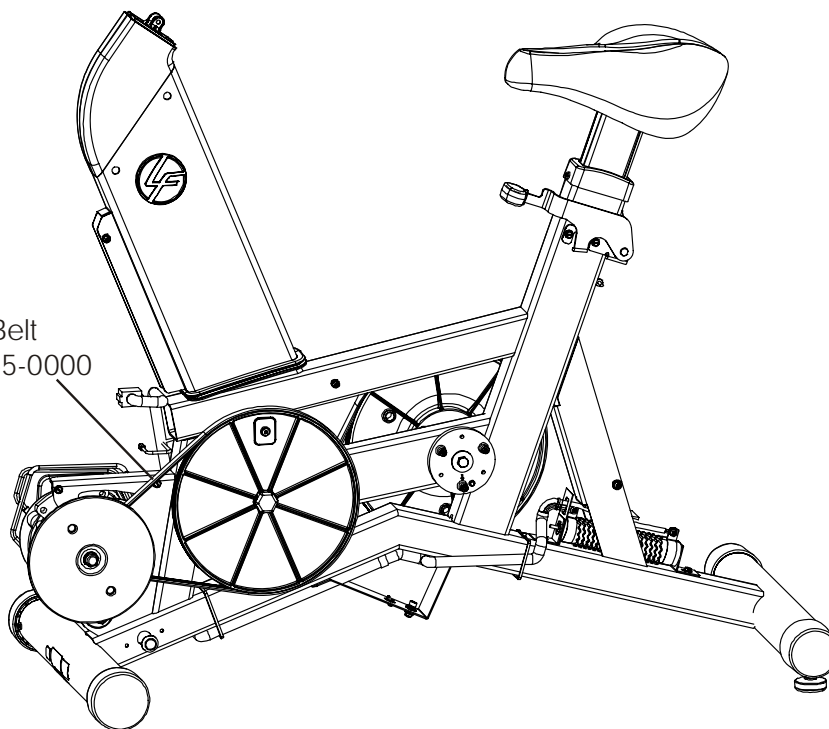 

Intermediate Belt
OK63-01066-0001

